



CSD6

P70/P5 DIP SWITCHES SETTING : 1(Pulse/ICT)

Supported bill CSD 10(01, 06), 20(00), 50(00, 05), 100(00, 03),
200(01, 05), 500(04) 6bills.

| | FUNCTION | SW1 | SW2 | SW3 | SW4 | SW5 | SW6 | SW7 | SW8 | SW9 | SW10 |
|---|---|-----|-----|-----|-----|-----|-----|-----|-----|-----|------|
| ★ | 1 Pulse / CSD 10 | OFF | OFF | OFF | | | | | | | |
| | 2 Pulse / CSD 10 | OFF | OFF | ON | | | | | | | |
| | 3 Pulse / CSD 10 | OFF | ON | OFF | | | | | | | |
| | 4 Pulse / CSD 10 | OFF | ON | ON | | | | | | | |
| | 5 Pulse / CSD 10 | ON | OFF | OFF | | | | | | | |
| | 10 Pulse / CSD 10 | ON | OFF | ON | | | | | | | |
| | 20 Pulse / CSD 10 | ON | ON | OFF | | | | | | | |
| | 100 Pulse / CSD 10 | ON | ON | ON | | | | | | | |
| | Fast output Pulse <small>Lo= 50ms Hi=100ms</small> | | | | ON | | | | | | |
| ★ | Slow output Pulse <small>Lo= 50ms Hi=300ms</small> | | | | OFF | | | | | | |
| | Inhibit level Active Low | | | | | ON | | | | | |
| ★ | Inhibit level Active High | | | | | OFF | | | | | |
| ★ | Accept CSD 10 & 20 | | | | | | ON | | | | |
| | Reject CSD 10 & 20 | | | | | | OFF | | | | |
| ★ | Accept CSD 50 | | | | | | | ON | | | |
| | Reject CSD 50 | | | | | | | OFF | | | |
| ★ | Accept CSD 100 | | | | | | | | ON | | |
| | Reject CSD 100 | | | | | | | | OFF | | |
| ★ | Accept CSD 200 | | | | | | | | | ON | |
| | Reject CSD 200 | | | | | | | | | OFF | |
| ★ | Accept CSD 500 | | | | | | | | | | ON |
| | Reject CSD 500 | | | | | | | | | | OFF |

★ Manufacture setting

Note: (1)Please reset the bill acceptor after set the dip switch.

(2)Dip switches 1 to 5 are only used for pulse protocol.

DIP SWITCHES SETTING : 2

| | FUNCTION | SW1 | SW2 | SW3 | SW4 |
|---|-------------------------------------|-----|-----|-----|-----|
| ★ | Pulse Normal High | ON | | | |
| | Pulse Normal Low | OFF | | | |
| ★ | Pulse Protocol | | ON | | |
| | ICT Protocol | | OFF | | |
| | Harness Disable | | | ON | |
| ★ | Harness Enable | | | OFF | |
| | Ignore Sensor Problem(Note 1) | | | | ON |
| ★ | Acknowledge Sensor Problem (Note 2) | | | | OFF |

★ Manufacture setting

Note : (1) Sensor 6 problem occurred ==>> BA will be still in working order.

(The face LED will be flashing in short green about 2 seconds everytime you restart BA.)

(2) BA will stop to work when it acknowledges Sensor 6 problem occurred.

(The face LED will be flashing in red.)

